

## HDPE TEE (HDPE MAIN / HDPE BRANCH)

NOTES:

WHEN HDPE MAIN IS CONNECTED TO DI FITTING, USE HDPE MJ ADAPTER AND DI REDUCER AS NECESSARY TO MAKE CONNECTION.

TYPICAL CONFIGURATIONS:


WHEN HDPE BRANCH IS 8", USE 8" GATE VALVE. USE 8"  $\times$  6" DI REDUCER AND 6" GATE VALVE ONLY WHEN CONNECTING TO 6" DIP/PVC

WHEN HDPE BRANCH IS 10", USE 10" x 8" DI REDUCER AND 8" GATE VALVE.

WHEN HDPE BRANCH IS 12", USE 12" GATE VALVE.

WHEN HDPE BRANCH IS 14", USE 14"  $\times$  12" DI REDUCER AND 12" GATE VALVE.

\* DESIGN ENGINEER TO PROVIDE RESTRAINED JOINT REQUIREMENTS.

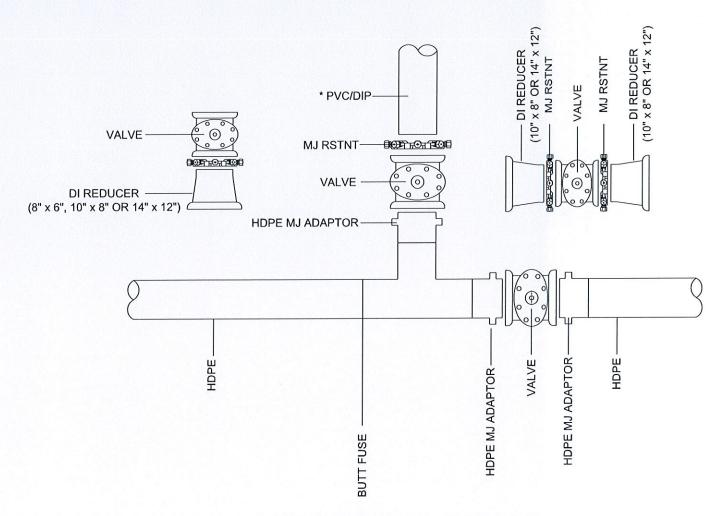

HDPE TEE (HDPE MAIN / DIP OR PVC BRANCH)

REVISION

CITY ENGINEER E

DESIGN MANAGER

CITY OF TULSA, OKLAHOMA ENGINEERING SERVICES DEPARTMENT

HDPE TEE DETAILS

DATE: FEBRUARY 2017

Y 2017 STD. 316

ME: /e1/barts/std/22x34\_TitleblockForReview.dan RMO 2/13