


DI TEE (DI MAIN / HDPE BRANCH)

NOTES:
 WHEN HDPE MAIN IS CONNECTED TO DI FITTING, USE HDPE MJ ADAPTER AND DI REDUCER AS NECESSARY TO MAKE CONNECTION.

TYPICAL CONFIGURATIONS:
 WHEN HDPE BRANCH IS 8", USE 8" GATE VALVE. USE 8" x 6" DI REDUCER AND 6" GATE VALVE ONLY WHEN CONNECTING TO 6" DIP/PVC
 WHEN HDPE BRANCH IS 10", USE 10" x 8" DI REDUCER AND 8" GATE VALVE.
 WHEN HDPE BRANCH IS 12", USE 12" GATE VALVE.
 WHEN HDPE BRANCH IS 14", USE 14" x 12" DI REDUCER AND 12" GATE VALVE.

* DESIGN ENGINEER TO PROVIDE RESTRAINED JOINT REQUIREMENTS.

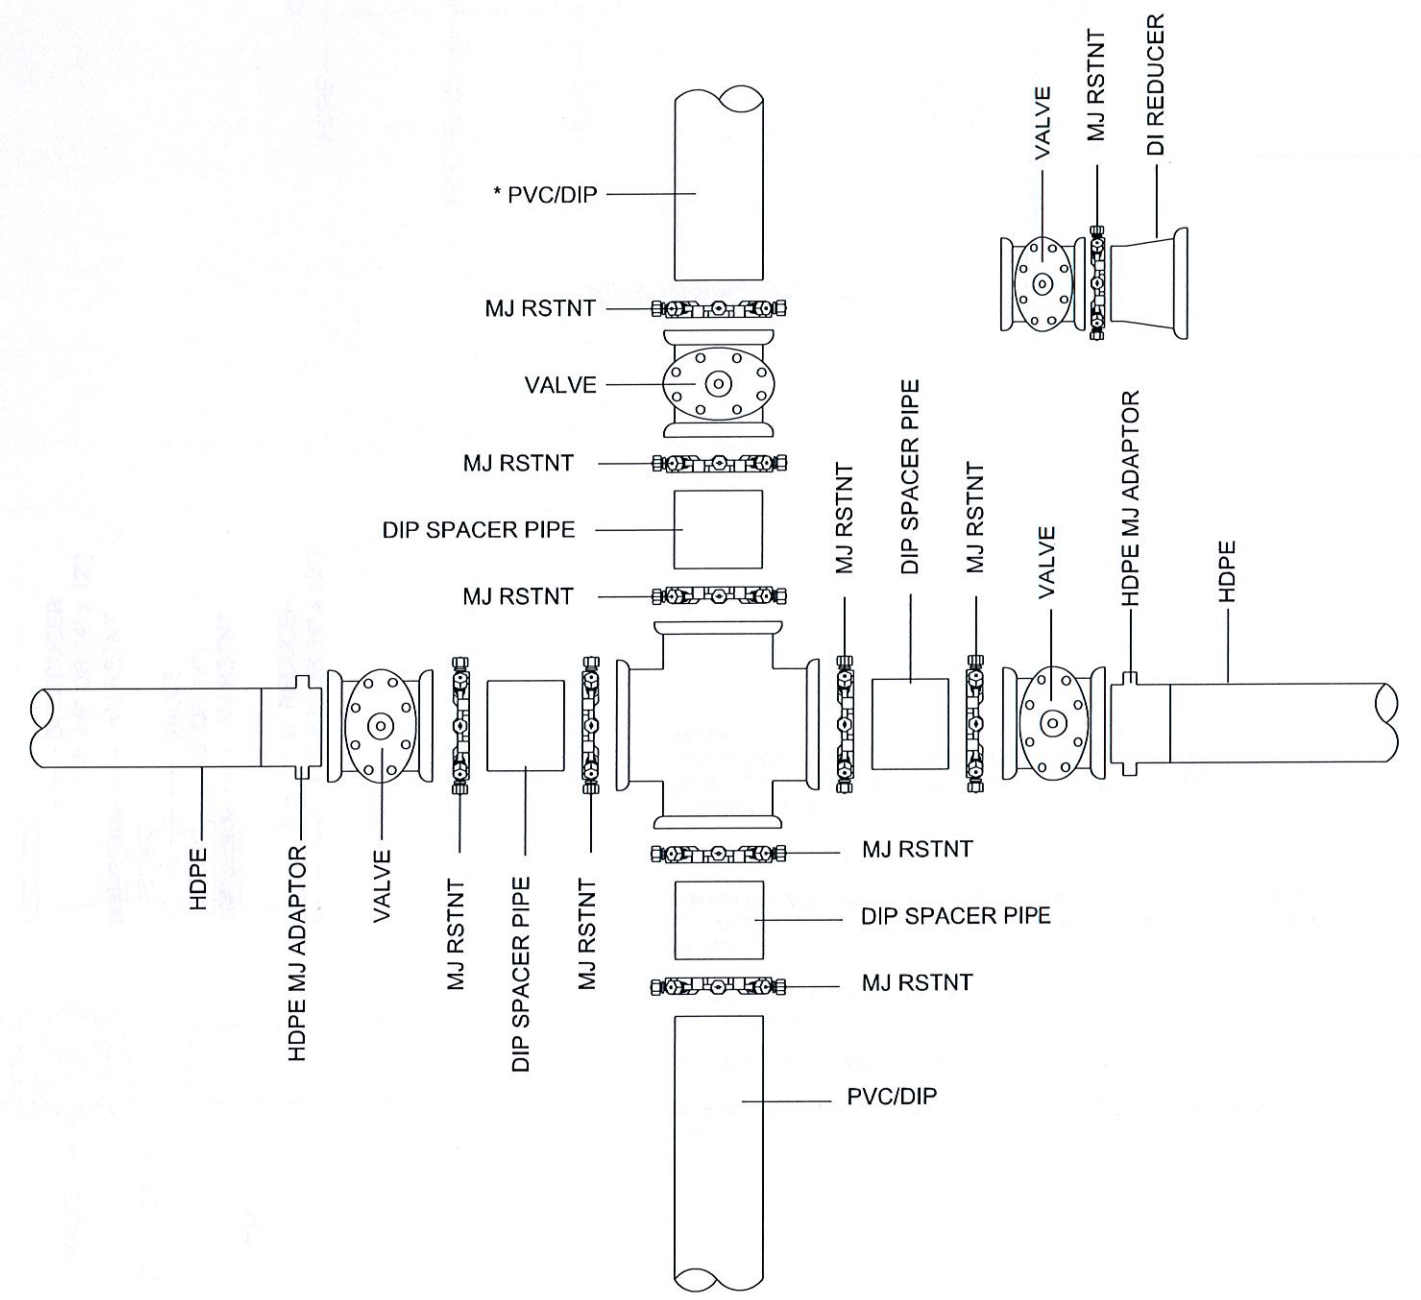

DI CROSS (HDPE MAIN / DIP OR PVC MAIN)

REVISION	BY	DATE

[Signature]
 CITY ENGINEER
[Signature]
 DESIGN MANAGER

CITY OF TULSA, OKLAHOMA
 ENGINEERING SERVICES DEPARTMENT
 HDPE-DUCTILE IRON FITTING
 DETAILS 2 OF 2
 DATE: FEBRUARY 2017
 STD. 318